
Installation Instructions
Fox Slurry Eductors
with Dry Hopper for
Low Discharge Pressure Applications

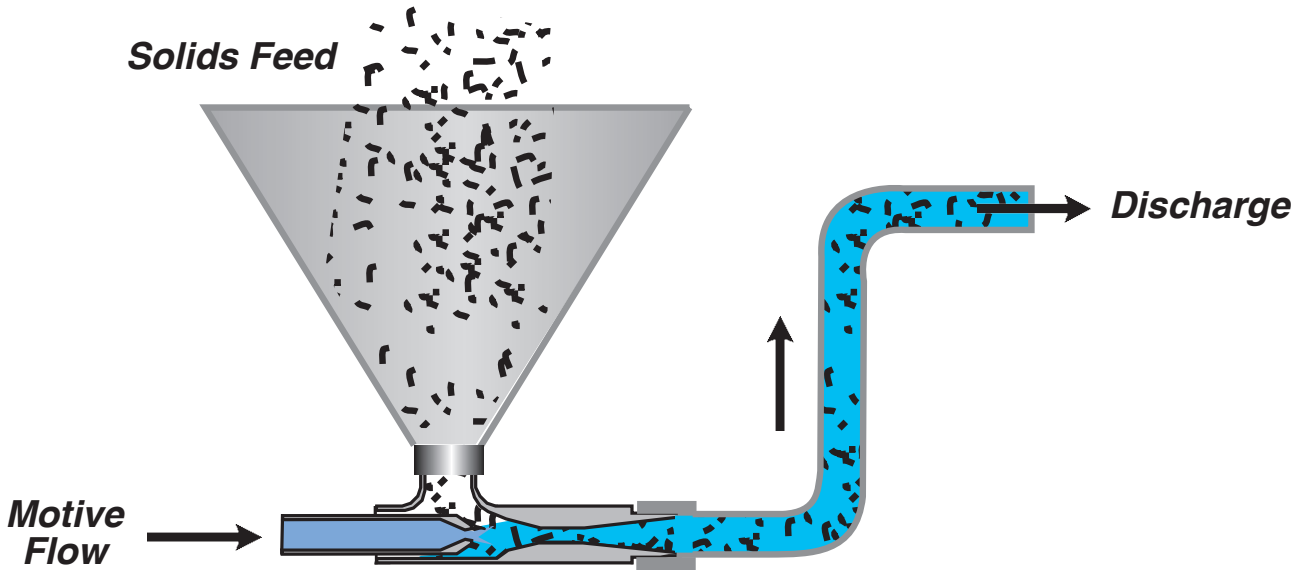

Fox Series 154-D
Dry Solids Water Jet Slurry Eductors


Fox Slurry Eductors are a simple, efficient way to mix, dissolve and/or transport many solid materials. The ***Fox Series 154-D Slurry Eductor*** *is for applications not requiring high discharge head capability.*

Installation

Fox Series 154 Slurry Eductors must be installed horizontally. A shutoff valve and pressure gauge are recommended on the motive liquid line. The motive nozzle is held into the eductor body with set screws. These screws are located at the back (motive) end of the eductor body. It is recommended to use a short length of flex hose to enable removal of the nozzle to provide access to eductor internals if foreign objects, clumps or debris cause clogging. When connecting the motive nozzle (if NPT threads), care must be taken to prevent the nozzle from being twisted loose.

Since discharge pressure has the greatest effect on the suction capacity of the slurry eductor, all eductors should be installed with the minimum length of discharge line and vertical piping to reach the destination. Fittings, valves and bends should be minimized. Discharge line size must match the eductor discharge connection size. Discharge line can never be reduced, and no restrictions or spray nozzles can be installed.

Fox Venturi Products
973.328.1011
Email: info@foxvalve.com
www.foxvalve.com

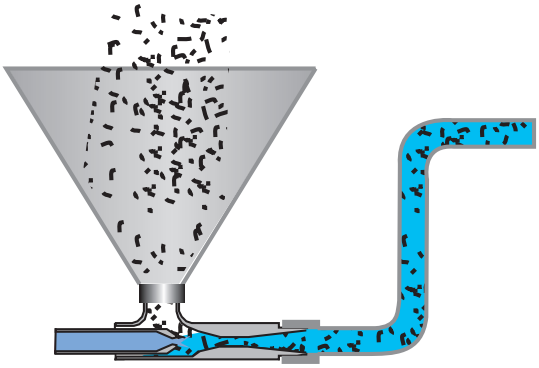

Installation Instructions Fox Slurry Eductors

Operation

Flood feeding of the hopper above a slurry eductor, such as from a bag dump, can work well but only with free flowing solids. Certain solids may cause bridging in the hopper above the hopper. The best results are obtained when solids are continuously fed at a controlled rate from a screw, belt or vibratory feeder with adjustable rate control. This allows the eductor to be fed at it's maximum capacity. Motive liquid flow rate needs to remain fixed and constant even as solids flow rate is varied.

Start-Up Procedure

To start the eductor, begin motive liquid flow first with no solids in the feed hopper. Always start with an empty discharge line.

When motive liquid flow is established at the proper motive pressure (approx 30 seconds), check to see if liquid is exiting the discharge pipe. The eductor should now be pumping air.

Begin solids feed. Always feed solids at a rate lower or near the eductor's maximum rated capacity. Only allow solids to build up in the feed hopper when handling well-behaved, dry, free-flowing solids.

Allow the eductor to clear all solids before shutting off the motive liquid flow rate. Allow additional time (30 to 60 seconds) to clear or empty the discharge piping so the system is purged and ready for the next batch/run.

Maintenance

Fox slurry eductors have no moving parts and require no maintenance. When re-assembling, be careful not to pinch the O-ring that seals the nozzle in the body.

The most common sources of operating problems result from: a) insufficient motive liquid pressure that does not match the original design value or b) increase discharge pressure due to extra bends, additional vertical piping, valves or restrictions.

Fox Venturi Products
973.328.1011
Email: info@foxvalve.com
www.foxvalve.com